



- 1 To keep the correct order of the lines during the installation of the soft link, pass the soft link through the lines without removing the plastic.
- 2 Once soft link is completely through line group, remove the plastic.



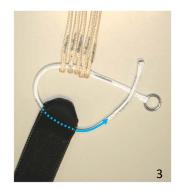



- Pass the soft link through the riser completing the first loop.
- 4 Then, pass the soft link through the line group and riser a second, third and fourth time to complete the fourth loop.

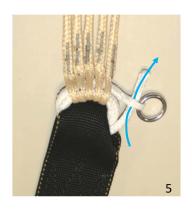





- 5 Pass the loop end of the soft link through the opening under the ring.
- 6 Insert the ring through the loop end of the soft link and pull tight.

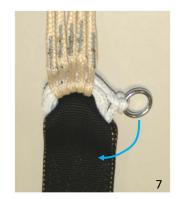

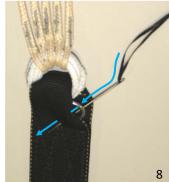


- 7 Pull on lines and riser simultaneously to even the length of the 4 link passes, and place the ring inside the riser.
- 8 Sew one hand tack passing through the ring and attaching only one side of the riser. \*Use Lite Super Tack Cord.

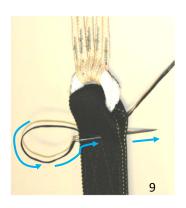

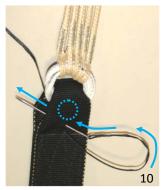

- 9 Pass the needle back through the two layers of the riser, without passing through the ring.
- 10 Pass the needle back, one last time, through one side of the riser only and in front of the stitch made in point 8.

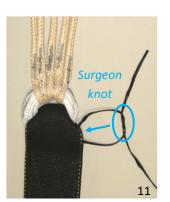



- 11 Tie a surgeon knot inside of the riser.
- 12 Finally, cut ends of thread, making sure they are not too close to the knots, and check correct assembly.





## Soft Link Installation Instructions

Tandem canopies only (Main & Reserve)

support@icarusworld.net www.icarusworld.net Icarus World Support

OTEC870028 Rev. 04

# 107