



www.icarusworld.net

ICARUS World Support
support@icarusworld.net

S/N

DOM _____ / _____ (MM/YY)

(Date of Manufacture)

Final Measurements (cm)

OUTSIDE	A1	470,5
	A2	471,4
	A3	471,6
	A4	471,7
CENTER	A5	471,8

OUTSIDE	B1	461,6
	B2	478,5
	B3	478,6
	B4	478,7
CENTER	B5	478,7


OUTSIDE	C1	458,0
	C2	496,1
	C3	497,4
	C4	497,9
CENTER	C5	498,4

OUTSIDE	D1	461,2
	D2	521,4
	D3	524,6
	D4	525,8
CENTER	D5	526,9

		Standard (6&2)
[X] UPPER STEERING LINES	1	139,8
	2	139,8
	3	164,8
	4	151,0
	5	141,8
	6	141,8
	7	151,0
	8	164,8
[Y] LOWER STEERING LINE		411,3
[Z] LOWER STEERING LINE		428,6

CANOPY	TX2
SIZE	330

Double Command Standard (6 & 2)

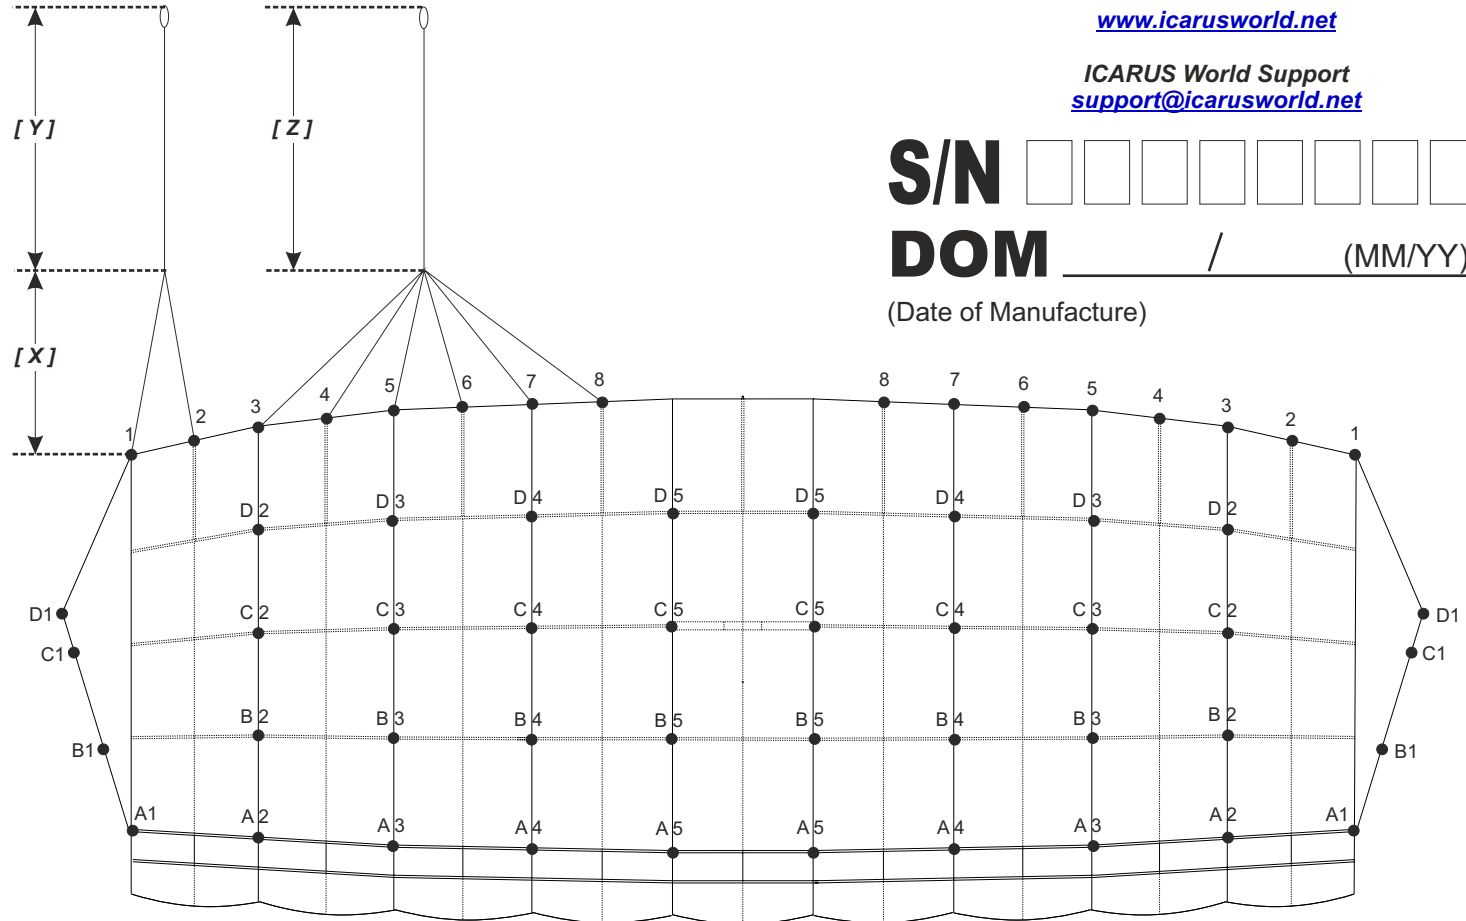

WHEN YOU RECEIVE A NEW LINE SET:

- **B or D Lines (cascades):** you can place them in either B or D-Line position, since all of them have the same length, and they are not specifically marked with their spanwise position.



www.icarusworld.net

ICARUS World Support
support@icarusworld.net

S/N

DOM _____ / _____ (MM/YY)

(Date of Manufacture)

Final Measurements (cm)

OUTSIDE	A1	470,5
	A2	471,4
	A3	471,6
	A4	471,7
CENTER	A5	471,8

OUTSIDE	B1	461,6
	B2	478,5
	B3	478,6
	B4	478,7
CENTER	B5	478,7


OUTSIDE	C1	458,0
	C2	496,1
	C3	497,4
	C4	497,9
CENTER	C5	498,4

OUTSIDE	D1	461,2
	D2	521,4
	D3	524,6
	D4	525,8
CENTER	D5	526,9

		Single Brake Line
[X] UPPER STEERING LINES	1	164,8
	2	151,0
	3	141,8
	4	x
	5	141,8
	6	151,0
	7	164,8
	8	x
[Y] LOWER STEERING LINE		428,6

CANOPY	TX2
SIZE	330

Single Brake Line

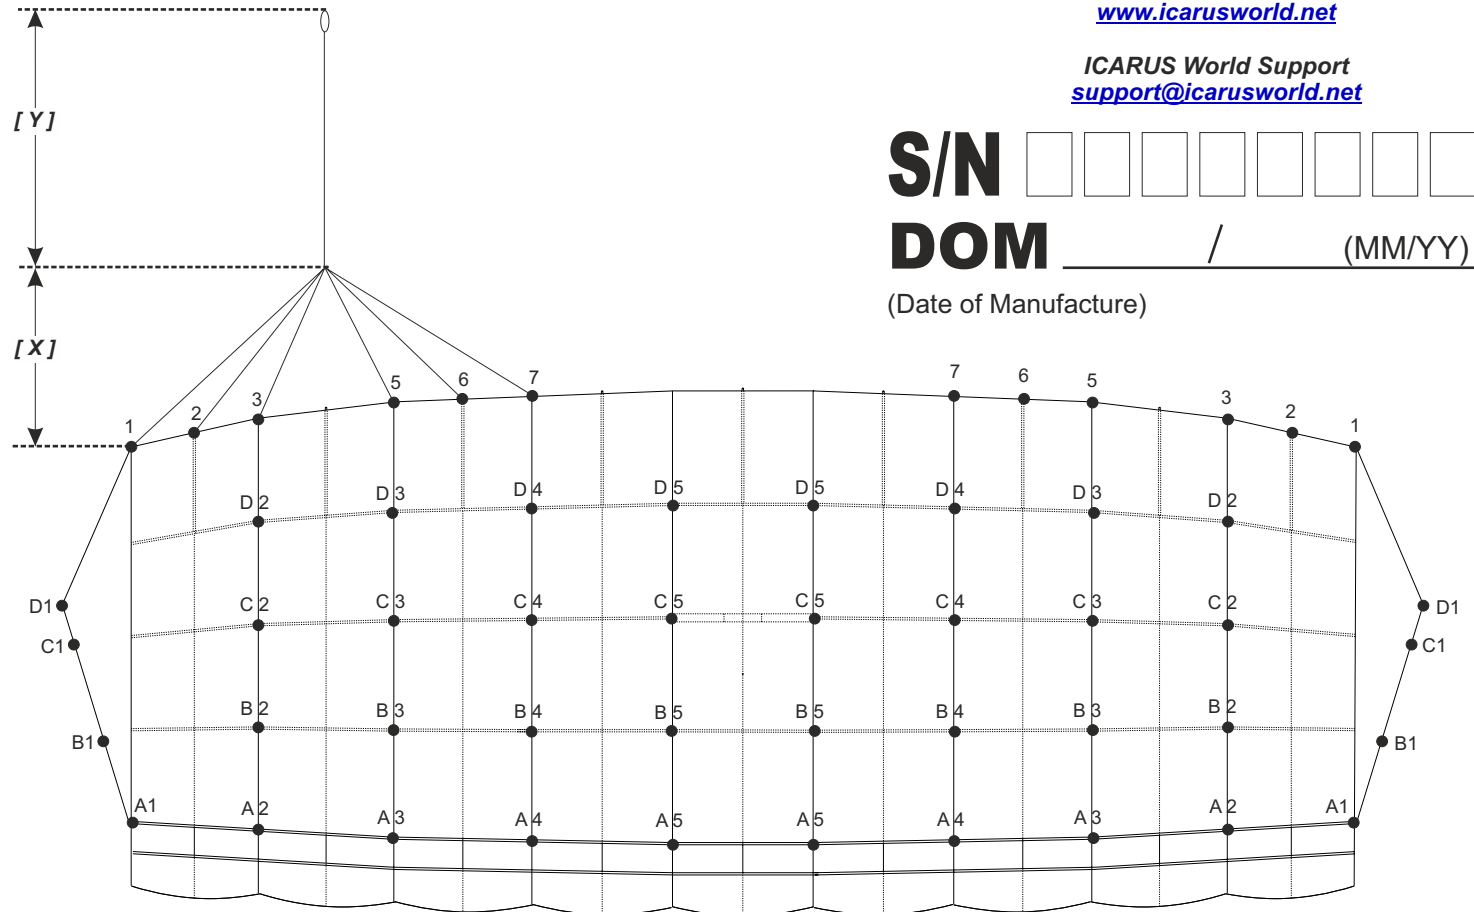

WHEN YOU RECEIVE A NEW LINE SET:

- **B or D Lines (cascades):** you can place them in either B or D-Line position, since all of them have the same length, and they are not specifically marked with their spanwise position.