



www.icarusworld.net

ICARUS World Support
support@icarusworld.net

S/N

DOM _____ / _____ (MM/YY)

(Date of Manufacture)

Final Measurements (cm)

OUTSIDE	A1	523,3
	A2	524,3
	A3	524,5
	A4	524,6
CENTER	A5	524,7

OUTSIDE	B1	513,5
	B2	532,1
	B3	532,2
	B4	532,2
CENTER	B5	532,3


OUTSIDE	C1	509,5
	C2	551,5
	C3	552,9
	C4	553,4
CENTER	C5	553,9

OUTSIDE	D1	513,0
	D2	579,3
	D3	582,8
	D4	584,1
CENTER	D5	584,5

		Standard (6&2)
[X] UPPER STEERING LINES	1	158,1
	2	158,1
	3	181,6
	4	166,4
	5	156,2
	6	156,2
	7	166,4
	8	181,6
[Y] LOWER STEERING LINE		457,0
[Z] LOWER STEERING LINE		476,1

CANOPY	TX2
SIZE	400

Double Command Standard (6 & 2)

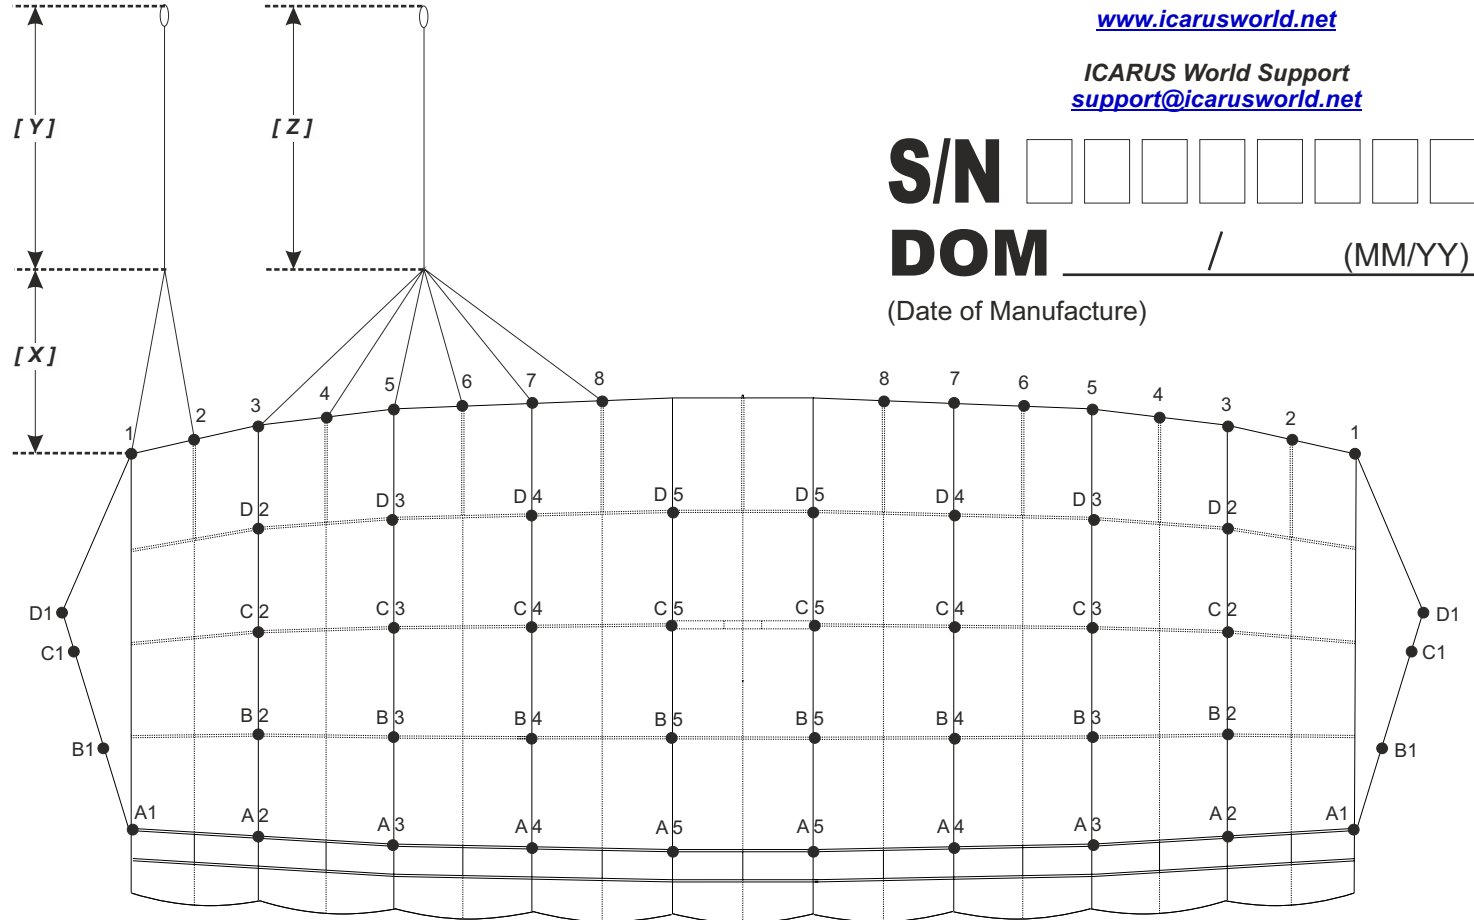

WHEN YOU RECEIVE A NEW LINE SET:

- **B or D Lines (cascades):** you can place them in either B or D-Line position, since all of them have the same length, and they are not specifically marked with their spanwise position.



www.icarusworld.net


ICARUS World Support
support@icarusworld.net

S/N

DOM _____ / _____ (MM/YY)

(Date of Manufacture)

Single Brake Line

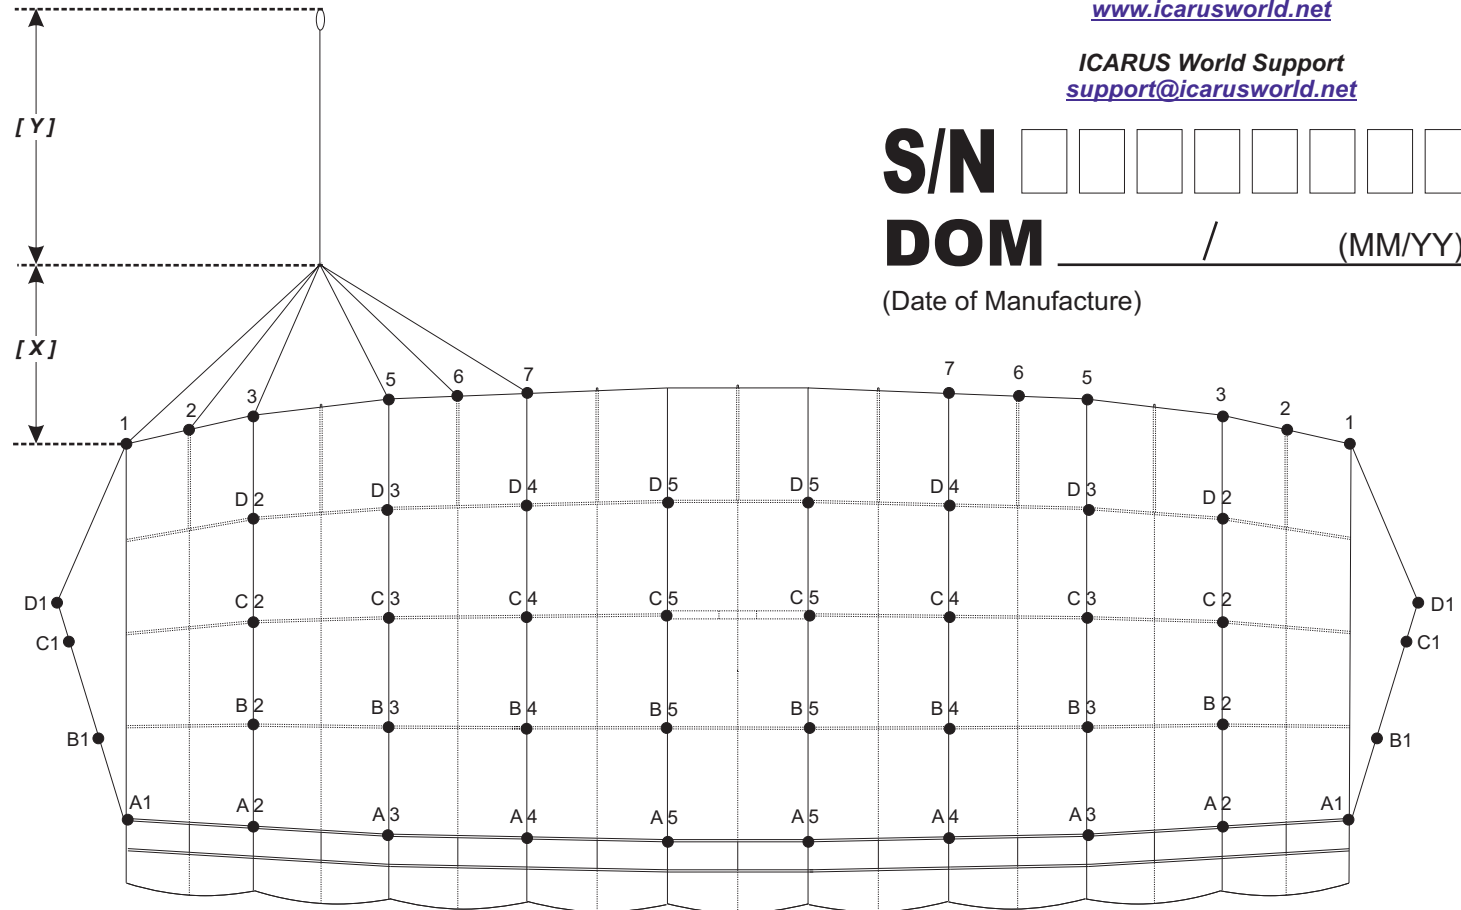

WHEN YOU RECEIVE A NEW LINE SET:

- B or D Lines (cascades): you can place them in either B or D-Line position, since all of them have the same length, and they are not specifically marked with their spanwise position.

Final Measurements (cm)

OUTSIDE	A1	523,3
	A2	524,3
	A3	524,5
	A4	524,6
CENTER	A5	524,7

OUTSIDE	B1	513,5
	B2	532,1
	B3	532,2
	B4	532,2
CENTER	B5	532,3

OUTSIDE	C1	509,5
	C2	551,5
	C3	552,9
	C4	553,4
CENTER	C5	553,9

OUTSIDE	D1	513,0
	D2	579,3
	D3	582,8
	D4	584,1
CENTER	D5	585,4

		Single Brake Line
[X] UPPER STEERING LINES	1	181,6
	2	166,4
	3	156,2
	4	x
	5	156,2
	6	166,4
	7	181,6
	8	x
[Y] LOWER STEERING LINE		476,1

CANOPY	TX2
SIZE	400