



[www.icarusworld.net](http://www.icarusworld.net)


ICARUS World Support  
[support@icarusworld.net](mailto:support@icarusworld.net)

S/N

DOM \_\_\_\_\_ / \_\_\_\_\_ (MM/YY)

(Date of Manufacture)

### Double Command Standard ( 6 & 2 )

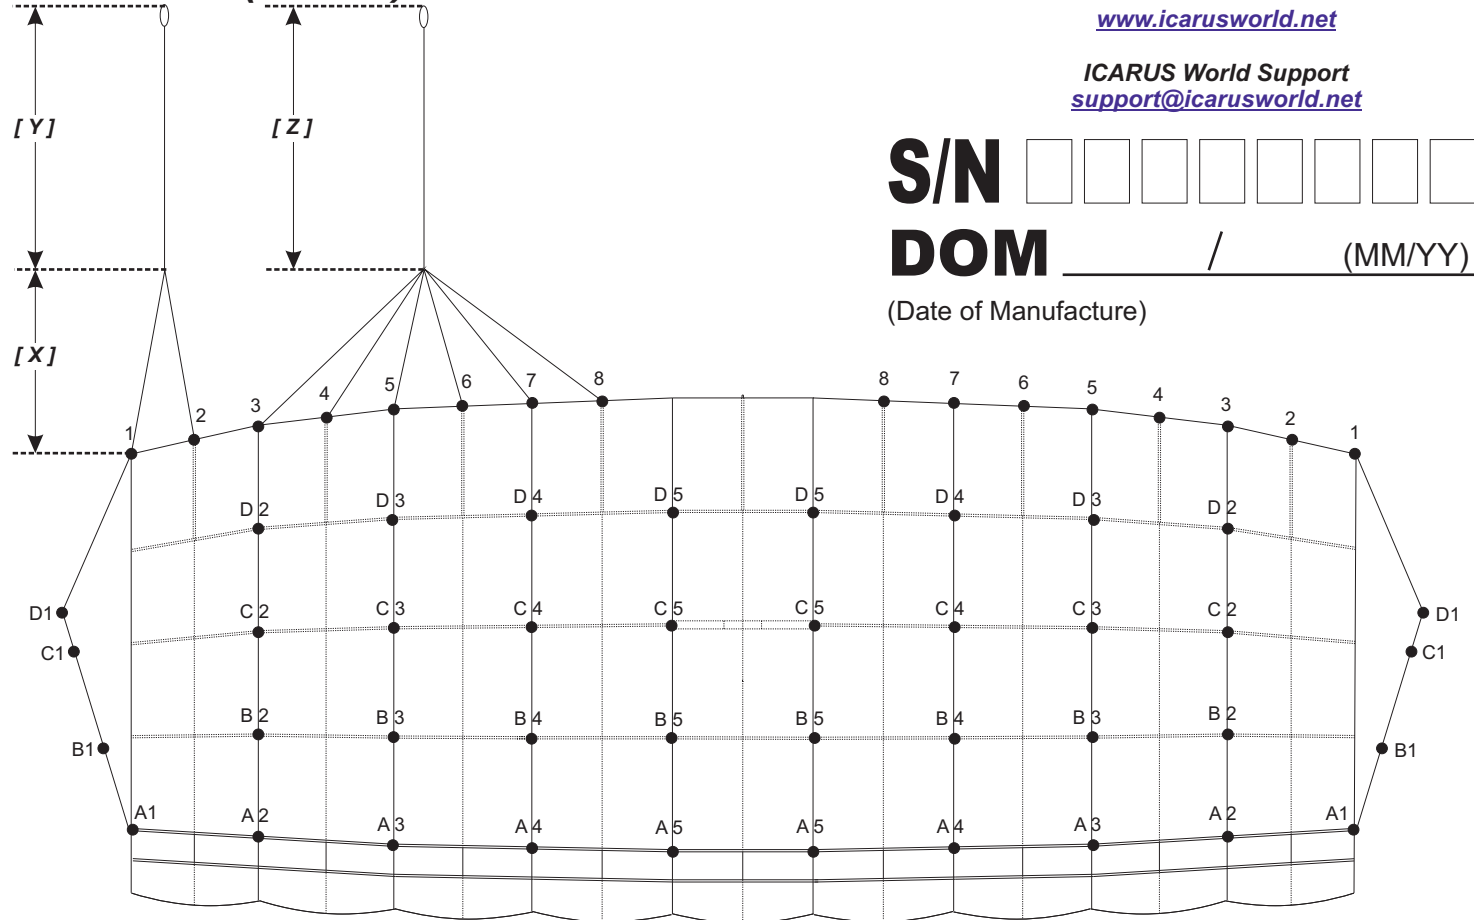

#### WHEN YOU RECEIVE A NEW LINE SET:

- **B or D Lines (cascades):** you can place them in either B or D-Line position, since all of them have the same length, and they are not specifically marked with their spanwise position.

#### Final Measurements (cm)

OUTSIDE	A1	453,0
	A2	453,7
	A3	453,7
	A4	453,8
CENTER	A5	453,8

OUTSIDE	B1	446,3
	B2	462,8
	B3	462,8
	B4	462,9
CENTER	B5	462,9

OUTSIDE	C1	445,1
	C2	482,1
	C3	483,4
	C4	483,9
CENTER	C5	484,4

OUTSIDE	D1	449,5
	D2	508,5
	D3	511,8
	D4	513,0
CENTER	D5	514,2

		Standard (6&2)
[ X ] UPPER STEERING LINES	1	134,3
	2	134,3
	3	159,7
	4	146,3
	5	137,4
	6	137,4
	7	146,3
	8	159,7
[ Y ] LOWER STEERING LINE		400,8
[ Z ] LOWER STEERING LINE		417,6

CANOPY	TX2 "STEEP"
SIZE	310




[www.icarusworld.net](http://www.icarusworld.net)

ICARUS World Support  
[support@icarusworld.net](mailto:support@icarusworld.net)

**S/N**

**DOM** \_\_\_\_\_ / \_\_\_\_\_ (MM/YY)  
 (Date of Manufacture)

**Single Brake Line**

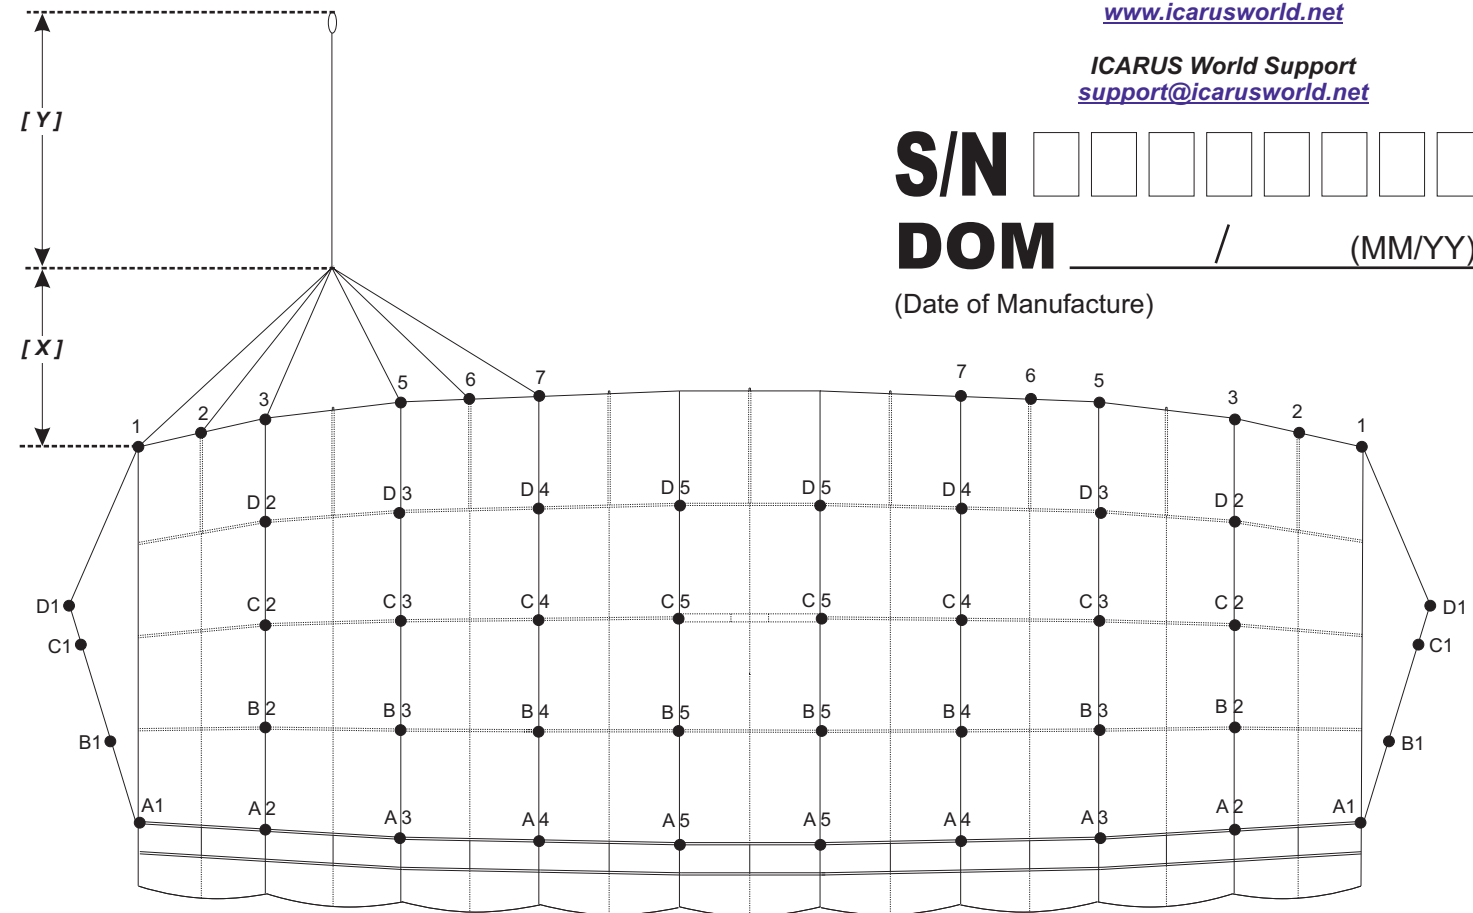

**Final Measurements (cm)**

OUTSIDE	A1	453,0
	A2	453,7
	A3	453,7
	A4	453,8
CENTER	A5	453,8

OUTSIDE	B1	446,3
	B2	462,8
	B3	462,8
	B4	462,9
CENTER	B5	462,9

OUTSIDE	C1	445,1
	C2	482,1
	C3	483,4
	C4	483,9
CENTER	C5	484,4

OUTSIDE	D1	449,5
	D2	508,5
	D3	511,8
	D4	513,0
CENTER	D5	514,2

		Single Brake Line
[ X ] UPPER STEERING LINES	1	159,7
	2	146,3
	3	137,4
	4	x
	5	137,4
	6	146,3
	7	159,7
	8	x
[ Y ] LOWER STEERING LINE		417,6

CANOPY	TX2 "STEEP"
SIZE	310

**WHEN YOU RECEIVE A NEW LINE SET:**

- **B or D Lines (cascades):** you can place them in either B or D-Line position, since all of them have the same length, and they are not specifically marked with their spanwise position.