



www.icarusworld.net


ICARUS World Support
support@icarusworld.net

S/N

DOM _____ / _____ (MM/YY)

(Date of Manufacture)

Double Command Standard (6 & 2)

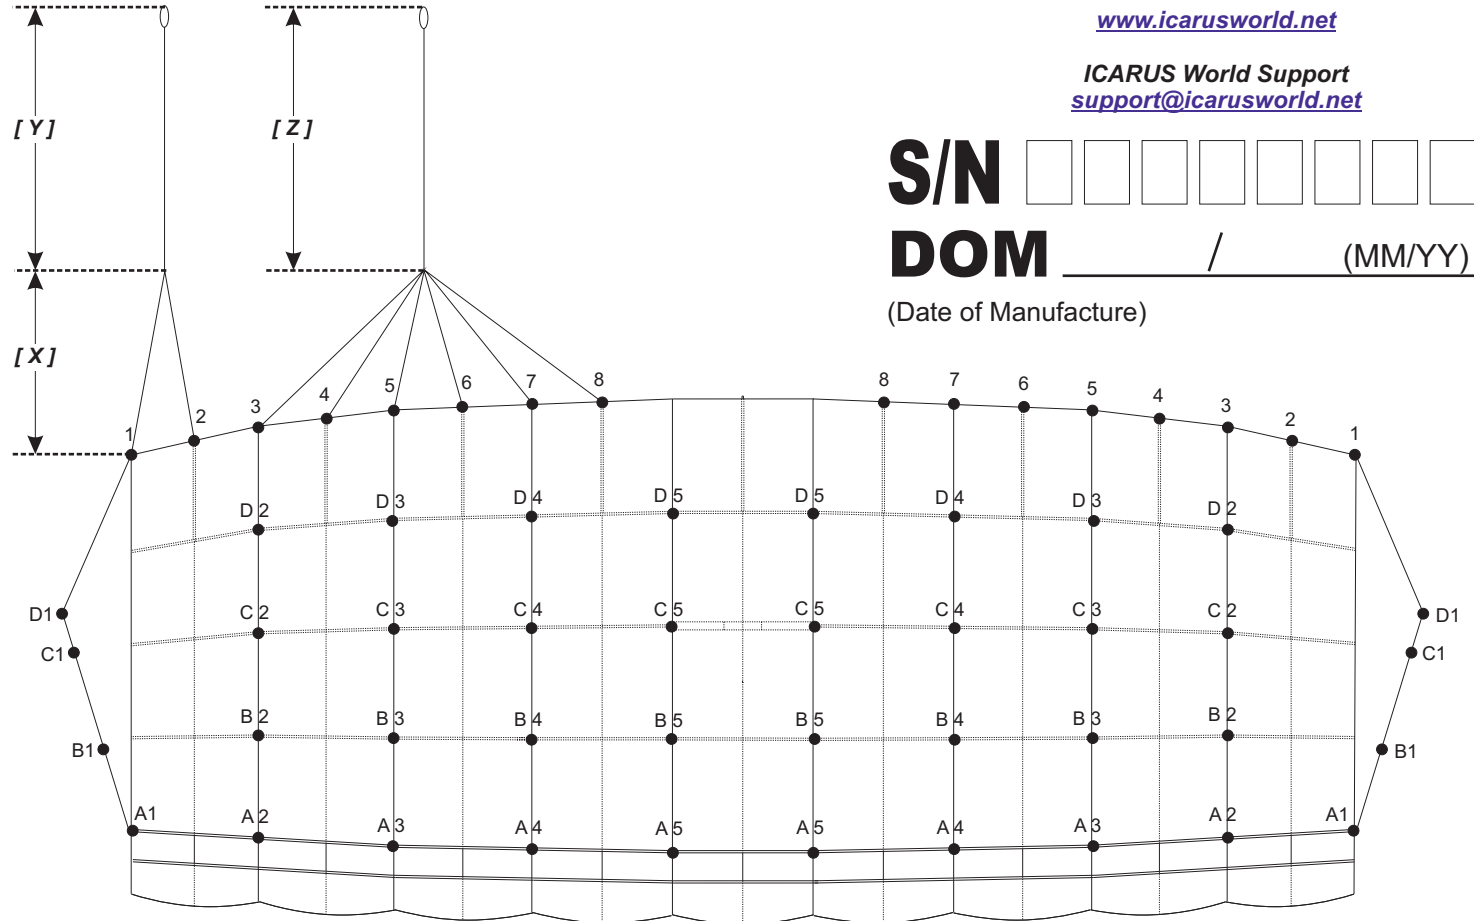

WHEN YOU RECEIVE A NEW LINE SET:

- **B or D Lines (cascades):** you can place them in either B or D-Line position, since all of them have the same length, and they are not specifically marked with their spanwise position.

Final Measurements (cm)

OUTSIDE	A1	484,6
	A2	485,4
	A3	485,4
	A4	485,4
CENTER	A5	485,5

OUTSIDE	B1	477,5
	B2	495,0
	B3	495,1
	B4	495,1
CENTER	B5	495,1

OUTSIDE	C1	476,2
	C2	515,5
	C3	516,9
	C4	517,4
CENTER	C5	518,0

OUTSIDE	D1	480,8
	D2	543,6
	D3	547,1
	D4	548,3
CENTER	D5	549,6

		Standard (6&2)
[X] UPPER STEERING LINES	1	145,2
	2	145,2
	3	169,8
	4	155,6
	5	146,1
	6	146,1
	7	155,6
	8	169,8
[Y] LOWER STEERING LINE		428,5
[Z] LOWER STEERING LINE		446,3

CANOPY	TX2 "STEEP"
SIZE	350



www.icarusworld.net

ICARUS World Support
support@icarusworld.net

S/N

DOM _____ / _____ (MM/YY)

(Date of Manufacture)

Final Measurements (cm)

OUTSIDE	A1	484,6
	A2	485,4
	A3	485,4
	A4	485,4
CENTER	A5	485,5

OUTSIDE	B1	477,5
	B2	495,0
	B3	495,1
	B4	495,1
CENTER	B5	495,1


OUTSIDE	C1	476,2
	C2	515,5
	C3	516,9
	C4	517,4
CENTER	C5	518,0

OUTSIDE	D1	480,8
	D2	543,6
	D3	547,1
	D4	548,3
CENTER	D5	549,6

		Single Brake Line
[X] UPPER STEERING LINES	1	169,8
	2	155,6
	3	146,1
	4	-
	5	146,1
	6	155,6
	7	169,8
	8	-
[Y] LOWER STEERING LINE		446,3

CANOPY	TX2 "STEEP"
SIZE	350

Single Brake Line

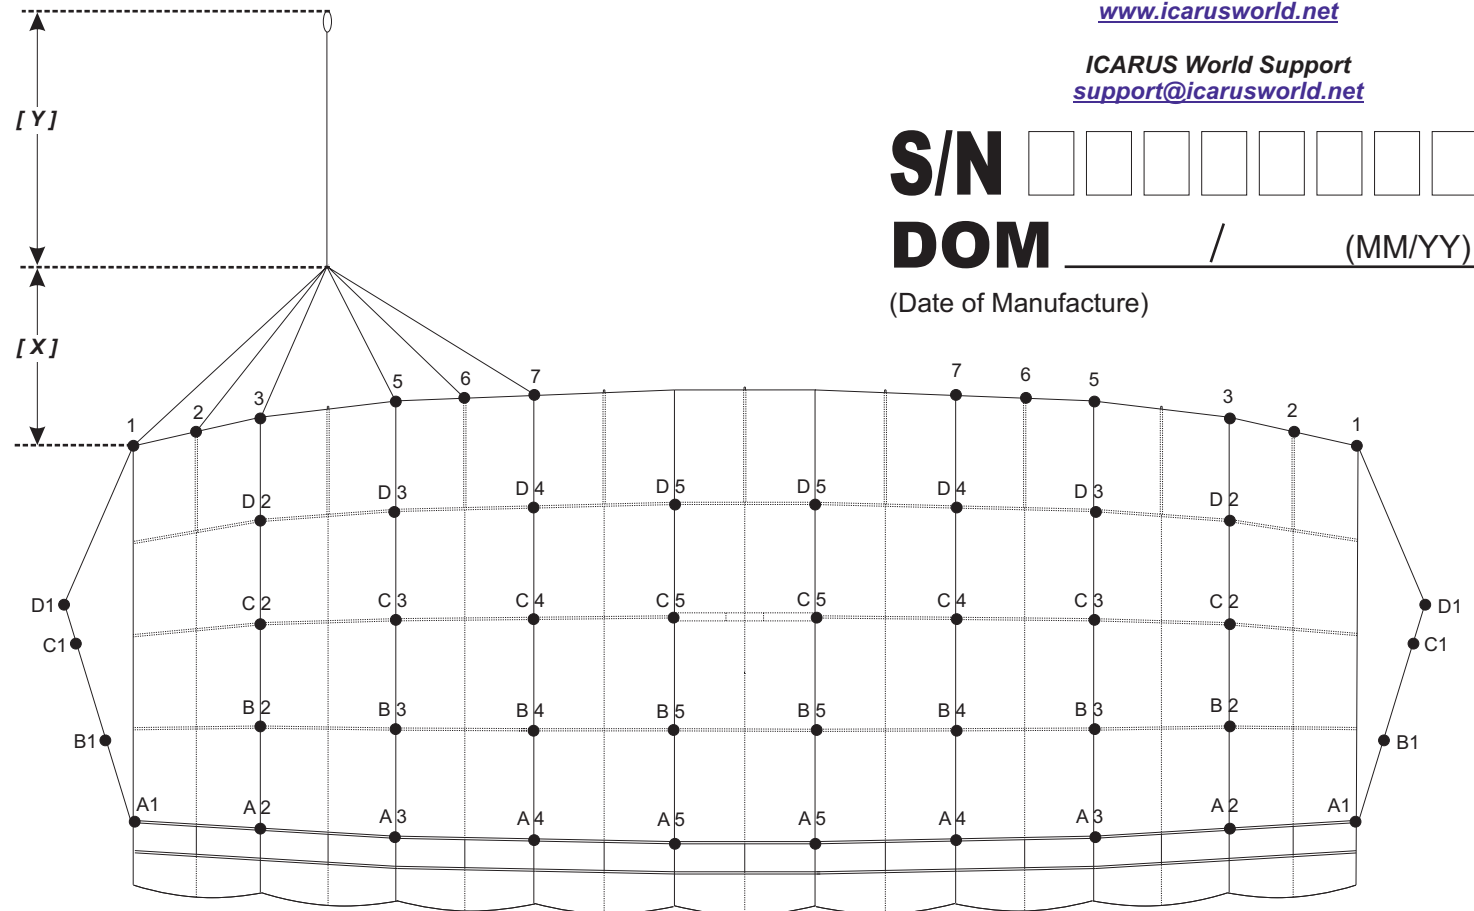

WHEN YOU RECEIVE A NEW LINE SET:

- **B or D Lines (cascades):** you can place them in either B or D-Line position, since all of them have the same length, and they are not specifically marked with their spanwise position.